



Larson Shutter Company

ca. contractors Lic 591633

selection · convenience · quality


1352 Blue Oaks Blvd., Suite 160

Roseville, CA 95675

1.800.675.6555

www.LarsonShutter.com


POST INSTALLATION INSTRUCTIONS

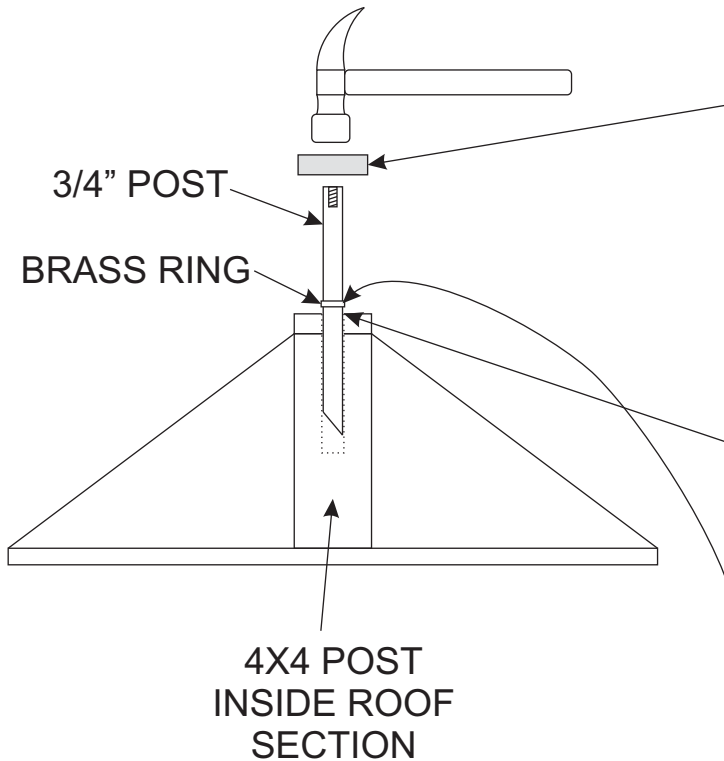

1
USING A BLOCK OF WOOD TO PREVENT DAMAGE TO THE TOP OF THE POST. GENTLY TAP 3/4" ROD DOWN WITH A HAMMER UNTIL ROD SEATS INTO 4X4 AND YOU CANT TURN POST BY HAND.

2
SILICONE POST AT TOP OF COPPER ROOF.

3
POSITION BRASS RING ON POST AND SLIDE DOWN TO DESIRED HEIGHT. TIGHTEN BRASS SCREW UNTIL SNUG. DO NOT OVER TIGHTEN.

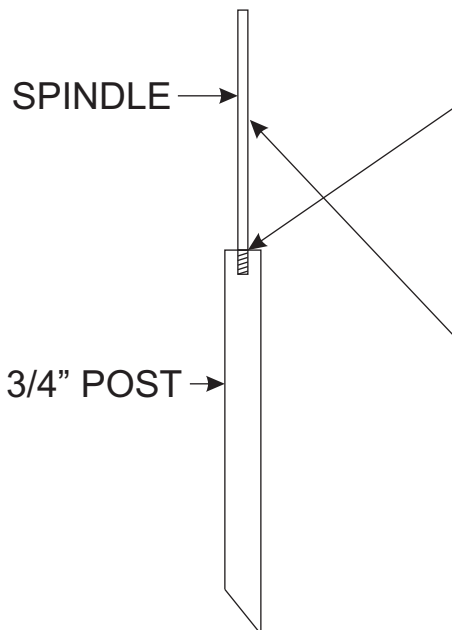

4
USE LOCTITE ON THREADS OF SMALL SPINDLE BEFORE SCREWING INTO 3/4" ROD. THIS WILL PREVENT IT FROM BACKING OUT.

5
ADD SMALL AMOUNT OF GREASE TO SPINDLE TO HELP WEATHERVANE TURN FREELY.